

**Remarks:**

- (1)Pairing mode will timeout automatically after pairing is completed.
- (2)Pairing mode will last for 5 seconds only.

**Two or more transmitters pairing:**

Only one transmitter can be programmed at a time. For additional transmitters, please follow the pairing steps (1)-(3) once again to pair the transmitters one by one.

It is common practice to choose a different ringtone for each transmitter so you can distinguish which transmitter is being triggered.

**Factory Reset:**

Hold the **Music Change** button for approximately 5 seconds. You will hear a short 'Ding Dong' ringtone and a quick flash of the LED strobe light. This indicates the receiver has reset to factory settings: **1st music sound & no transmitter paired with the receiver.**

**Changing the Ringtone:**

Refer to **Step 3** in the "Quick Start" section of this manual.

**WC180-SS Receiver & Transmitter Installation**

**Important:** Test the range before mounting the push button (or other compatible sensor). The **sensor will be referred to as a "transmitter"** in this document. The options below are for a push button. If using a different transmitter type, consult that manual.

**Transmitter Installation Method 1:** Double-sided adhesive tap (Easiest install method)

- 1.After ensuring the right mounting position, please clean the flat area where you intend to install transmitter.
- 2.Tear off one side of the double-sided adhesive tap and stick it to the underside of transmitter; tear off the other side and place the transmitter on the wall. Hold in place for 10 seconds.

**Transmitter Installation Method 2:** Screw/Anchors  
Please prepare an electric drill, Phillips screwdriver and slotted screwdriver before installation.

1. Use the small screwdriver to separate the top half of the case from the lower half of the cases.
2. Using the back half of the case as a template, make two marks on the wall.
3. Drill two holes on the marked places, then insert the wall anchors (if needed).
4. Use the supplied screws to secure the back half of the push button to the wall.
5. Snap top half of push button cover to lower half.

**Troubleshooting**

- 1.The receiver doesn't sound
  - Check the doorbell button battery, replace it if necessary.
  - The receiver is not securely set into the outlet .
  - The receiver could be out of range of the doorbell button.
  - The receiver may not have paired with the doorbell button.
  - Ensure the volume is not muted (press volume button).
- 2.Operating range is reduced
  - Metal structures, including uPVC door frames can reduce the range of the product. Avoid mounting the push or chime on or near metal structures.
  - Other equipment can cause radio interference that affects your doorbell.
  - Walls and ceilings will reduce the range.
  - Weak batteries will reduce range. Replace every 12–18 months.

**Warranty Info & Contact Information**

This product is warranted for 1 year by Safeguard Supply. Please consult the Safeguard Supply website at [safeguardsupply.com/warranty-policy](http://safeguardsupply.com/warranty-policy) for additional information.

To contact us:

- Safeguard Supply
- [info@safeguardsupply.com](mailto:info@safeguardsupply.com)
  - 800-366-7235

For warranty information, visit: <https://safeguardsupply.com/warranty-policy>  
For FCC Information, visit: <https://safeguardsupply.com/fcc>

Product: Doorbell  
Model No.: WC180-SS  
FCC ID: RWE-B12  
Rating: 125V 50/60Hz ,20mA Max.




**WC180-SS  
WIRELESS DOORBELL KIT  
User Manual**

Please carefully read this user manual before using and installation

**What You Should Know Before Using**

- 1.The transmitter (push button) supplied with this kit comes paired with the receiver from the factory, set to default ringtone "Ding-Dong". If you are only using the push button included with this kit and are okay with the "Ding-Dong" ringtone, then there is no programming/pairing required.
- 2.**IF NOT**, please refer to the "Quick Start" section to pair the transmitter with the receiver and set your favorite ringtone(s).
- 3.It is not advisable to mount the transmitter onto metal surfaces as the it will diminish or block RF signals between the transmitter and the receiver. However, if this is the only option then we recommend that you use the sticky pad provided as opposed to using the provided screws.
- 4.Operating range will decrease if battery in transmitter is in low power status.
- 5.It is not advisable to mount the transmitter in the outdoor directly without any shelter which could accelerate aging of plastic materials.
- 6.This manual provides instructions for pairing a transmitter (push button) to the receiver.


**Quick Start**

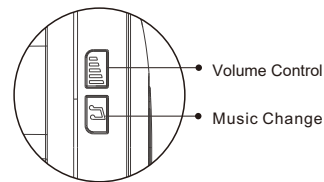

1. **Volume Control Button Location:** Press the **Volume Control** button on the receiver. Press the button to toggle between High and Low volume and mute.  
**\*The volume level setting does not affect the strobe light.**
2. **Set Ringtone Using the Music Change Button:** Press the **Music Change** button to choose your favorite ringtone, stop pressing the button after you select the ringtone you want the receiver to play for that paired transmitter/push button.


**3.Pairing a transmitter to the receiver:**

- (1) Select the ringtone you want to associate with the transmitter.

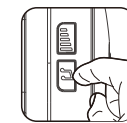

Select ringtone

- (2) Hold and press the **Volume Control** button for 5 seconds until a long sound is heard and the LED strobe starts flashing. The receiver is in pairing mode.

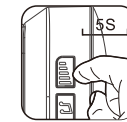

Hold Volume Change for 5s

- (3) Push the center push on the push button (or other transmitter) to send a signal to the receiver.



Active the transmitter