



*A Member Of The  
Craftmade Family Of Products*



MODEL: C3PW  
CA3RC


## READ AND SAVE THESE INSTRUCTIONS

### INSTALLATION

**ALL ELECTRICAL WORK MUST BE DONE IN ACCORDANCE WITH LOCAL AND/OR NATIONAL ELECTRICAL CODE AS APPLICABLE.**

**TURN OFF POWER AT THE BREAK BOX BEFORE INSTALLING, WIRING, OR SERVICING THIS PRODUCT.**

1. Hold chime mechanism against wall and mark (4) mounting holes.
2. Drill 3/16" holes where marked and tap in wall anchors from parts bag.
3. Bring wiring through access hole(s) in chime mechanism backplate.
4. Loosely attach chime mechanism to wall with screws from parts bag.
5. Tighten screws securely.

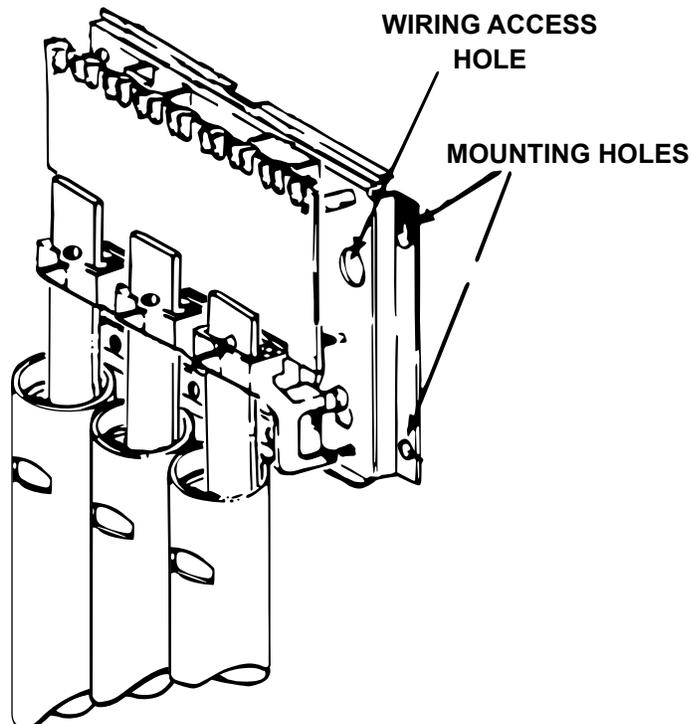


**DO NOT OIL CHIME PLUNGERS.**

Oil will cause them to stick during operation. If plungers fail to operate freely due to accumulation of dust, cooking grease, etc, clean with a non-flammable cleaning solvent which will evaporate, leaving a dry surface.


# INSTALLATION (continued)

6. Connect wires to appropriate terminals.

## RECOMMENDED CONSTRUCTION WIRING SINGLE CHIME WIRING CONSTRUCTION

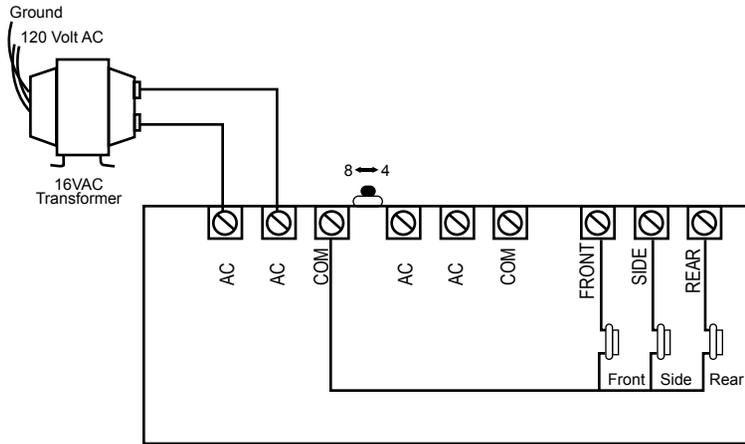

## TWIN CHIME WIRING CONSTRUCTION

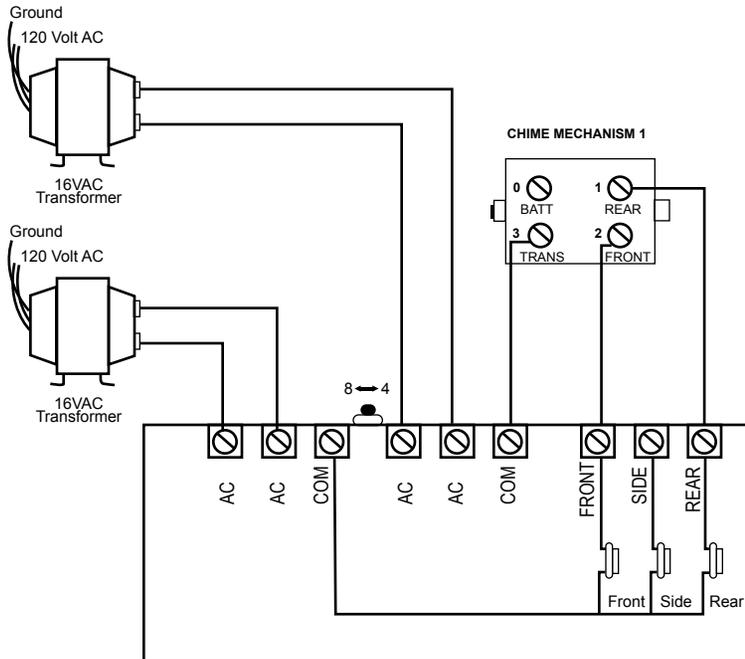

7. Turn on power at breaker box. Make sure pushbuttons operate chime properly. (Adjust switch on circuit board for 4 or 8 chime tones at front door. Side and rear doors will have 1 chime tone each.)
8. Adjust chime volume with stem on circuit board assembly. If plunger(s) fail to strike tube(s), move tube(s) one notch closer. If plunger(s) strike a double tone move tube(s) one notch out.
9. Hook cover over chime mechanism.

## WARRANTY



### ONE YEAR LIMITED WARRANTY

**TERM:** One year from date of purchase of the original consumer.

**COVERAGE:** Products will be free from defects in materials or workmanship. There are no other warranties, express or implied, including, but not limited to, implied warranties of merchantability or fitness for a particular purpose. Not covered: Normal maintenance and service, products subject to misuse, neglect, accident, improper maintenance or service, or installation differing from the recommended installation instructions.

**REMEDY:** Teiber Lighting Products will repair or replace, at its option, without charge, any product or part, which is found to be defective under normal use. This is the sole remedy under this warranty. Teiber Lighting Products will not be liable for secondary, consequential or special damages arising out of or in connection with product use or performance.

This warranty gives you specific legal rights, and you may have other rights, which vary by state. This warranty supersedes all prior warranties.

To qualify for warrant service, please contact Teiber Lighting Products with the following information: model number, evidence of original purchase date and nature of defect.

TEIBER LIGHTING PRODUCTS

[www.teiber.com](http://www.teiber.com)

1-800-486-4892