

*Alarm sounds when door is opened!*

# ***DOOR ALARM***



---

**Powerful 112dB alarm**

---

 
**Built-in battery backup**

# DOOR ALARM


**Alarm sounds when transmitter and magnet are separated. Ideal for homes, apartments, RV's, boats, detached garages and storage rooms!**

## INSTALLATION


1. Use a small flat head screwdriver to remove Battery Cover from transmitter.

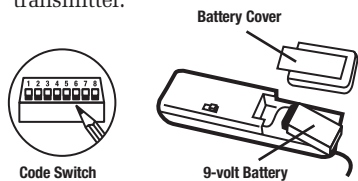

2. There are a total of 256 Personal Security System Code combinations available. Set your Personal Security System Code by sliding a few of the eight switches forward with a pen. All forward is NOT recommended. You can change your code at any time in the future. This same code MUST be duplicated later on the Door Alarm.
3. Install a 9-volt alkaline battery and replace cover.
4. Place Transmitter on door frame. To mount transmitter with screws provided, use the mounting holes as a template and mark with pencil or nail. Mount transmitter. Transmitter may also be mounted using double-sided tape (included). Cut wire to desired length, remove 1/4 inch of insulation, and attach to Sensor Switch Terminals.

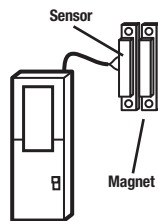 

 5. Align Magnet and Sensor Switch (no more than 1/4 inch apart), arrows facing each other. Mount to door using screws or tape.
6. Remove the Personal Code Switch Cover from the Door Alarm.
7. Duplicate Personal Security System Code used on Transmitter.

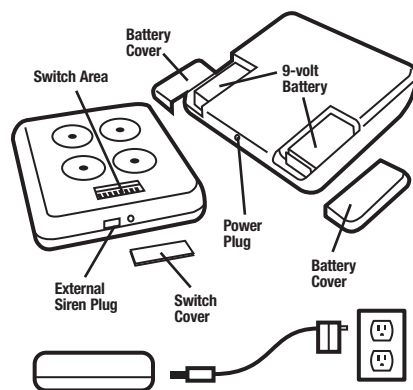

8. With a small flat head screwdriver, remove both Battery Covers. Install two 9-volt alkaline batteries, one on each side of the Door Alarm. Replace Battery Covers. Battery power will operate continuously for up to 72 hours when house current is interrupted.

9. Determine, within 75 feet of the transmitter, where you want to mount the Door Alarm. Insert screw provided into wall leaving screwhead 1/8 inch out. Slide "Key Slot" on back of Door Alarm over the head of the screw. Door Alarm may be ceiling mounted, using the additional mounting hole accessible through the "front" Code Switch Cover.
10. Plug Adapter into Power Jack on the Door Alarm. Plug AC Adapter into an electrical outlet that is NOT controlled by a wall switch.
11. Set your Door Alarm into operation by sliding the Transmitter Switch to the "ON" position. The Door Alarm will emit a short beep to verify the system is armed. When the magnetic contact is broken, the Door Alarm will sound in a pattern of four seconds on and four seconds off to warn you the door has been opened. It will continue to sound for five minutes and then reset itself. If the door is opened again, the alarm will sound again.
12. For your personal entry access and use, there is a built-in 2.5 second delay to allow you to slide the Transmitter Switch to the OFF position (bypassing the Alarm). After use, slide the Transmitter back to the ON position and quickly close the door.
13. Slide the Transmitter Switch to the OFF position to deactivate the Door Alarm.

- Powerful 112dB alarm.
- Convenient on/off switch, with 2.5 second delay to allow you to slide transmitter "off" when you need access to protected area.
- Uses three 9-volt batteries, two for the door alarm's built-in battery backup feature and one for the transmitter.
- Additional transmitter and magnet sold separately to monitor more than one location.

### LIMITED WARRANTY

The product you have purchased is guaranteed against defects in workmanship and materials for the period stated on the package. Warranties implied by law are subject to the same time period limitation. Some states do not allow limitations on how long an implied warranty lasts, so this time limitation may not apply to you.

If the product fails due to a manufacturing defect during normal use, return the product and dated sales receipt to the store where purchased for replacement OR send the product and the dated sales receipt to:

Lamson & Sessions  
25701 Science Park Drive  
Cleveland, OH 44122 USA  
Attn: LHP Customer Service

**Not Covered** - Batteries, light bulbs, and other expendable items are not covered by this warranty. Repair service, adjustment and calibration due to misuse, abuse or negligence are not covered by this warranty. Unauthorized service or modification of the product or of any furnished components will void this warranty in its entirety. This warranty does not include reimbursement for inconvenience, installation, set-up time, loss of use, postage, unauthorized service, or other products used in conjunction with, but are not supplied by, Lamson & Sessions.

All requests for replacement must include a **dated sales receipt** (copies accepted). LAMSON & SESSIONS IS NOT LIABLE FOR LOST PROFITS, INDIRECT, SPECIAL, EXEMPLARY, INCIDENTAL OR CONSEQUENTIAL DAMAGES INCLUDING WITHOUT LIMITATION ANY SUCH DAMAGES DUE TO IMPROPER WIRING OR MISUSE OF THE PRODUCT. As some states do not allow the exclusion or limitation of incidental or consequential damages, the above limitation and exclusion may not apply to you.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

This device complies with RSS-210 of Industry Canada.

### ALSO AVAILABLE FROM CARLON:

- Extend-A-Chime® - lets you hear your existing wired doorbell in remote areas of your home or yard
- Plug-in and Battery Doorbells and Chimes
- On/Off Remote Switches
- Touch and Automatic Lighting Controls

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. If you have questions or need further assistance, please call Customer Service at: 1-800-346-2646 Mon. - Fri., 9 a.m.-4 p.m. EST.

## Carlton®

25701 Science Park Drive  
Cleveland, Ohio 44122  
www.lamson-sessions.com

Made in China  
©2004 LAMSON & SESSIONS  
0409 SR2215



0 81203 02215 0