

# WC180 Flashing Door Chime Kit

Sold by [1800doorbell.com](http://1800doorbell.com)

# Instruction Manual

## **Instructions for wireless plug-in chime kit ( Model no.WP180USL+WB035A)**

1. Use a small screwdriver to open the cover of transmitter. Insert the supplied 1pc 3V CR2032 button cell with positive (+) up, observe polarity.
2. Locate a good position for the pushbutton next to the door. Do not mount on or next to a metal surface. Drill two 4.76mm holes and insert the wall plugs. Place the back plate in the right position and tighten the plate on wall with the screws (2.6 x 26mm BA type) supplied. Close the cover.

*\*if you are mounting the pushbutton on a metal or stucco surface, it is recommended you place a wood or cardboard shim under the pushbutton. This helps the radio signal emanate from the button more easily.*

3. Plug the receiver into a 120V AC mains two flat pin socket.
4. Press "Learn" button ( symbol  ) once at the side of receiver, the receiver will sound 2 beeps. It indicates the receiver is in learn mode process.
5. Press the transmitter once, and you will hear the chime receiver sound. This indicates the receiver is learning the signal from transmitter properly. Press the transmitter to hear the built-in tunes in the receiver. Stop pressing the transmitter when you hear the desire melody. There are total 3 different chime tunes for selection.
  - ding ding
  - ding dong
  - Westminster 4-note chime
6. After that, press again "learn" button on the receiver, the receiver will sound 2 beeps to exit the learn mode Or, just wait approx. 20secs, the receiver will exit the learn mode automatically.
7. Press the transmitter, the receiver will sound the tune selected, and then flash.
8. Receiver can learn up to 4pcs of transmitter. Repeat the above step.4, 5, 6, 7.
9. Locate the chime receiver within the working range 125ft.
10. It is possible to erase all learned transmitters. Press & hold the "learn" button on the receiver approx. 15secs until it sounds 4 beeps. It indicates all learned transmitters have been erased successfully.
11. Factory will link up the transmitter & receiver and pre-set the melody to "ding ding" before shipment.

### Notes:

The radio signal's strength depends on constructional conditions when being transmitted through walls, paneling, furniture and other obstacles- walls, in particular reinforced concrete walls and ceilings lead to a reduction in range.



**SAFEGUARD**  
SUPPLY

SafeGuard Supply, LLC.  
2260 Moon Station Ct. NW  
STE 110  
Kennesaw, GA 30144

P: 800-366-7235  
E: [info@1800doorbell.com](mailto:info@1800doorbell.com)  
URL: [www.1800doorbell.com](http://www.1800doorbell.com)

# WC180 Flashing Door Chime Kit

Sold by 1800doorbell.com

# Instruction Manual

## LIMITED WARRANTY

The product you have purchased is guaranteed against defects in workmanship and materials for the period stated on the package. Warranties implied by law are subject to the same time period limitation. Some states do not allow limitations on how long an implied warranty lasts, so this time limitation may not apply to you.

If the product fails due to a manufacturing defect during normal use, return the product and dated sales receipt to the store where purchased for replacement OR send the product and the dated sales receipt to:

**1800doorbell, LHE, Inc.**  
2260 Moon Station Ct. NW #110, Kennesaw, GA 30144

**Not Covered** - Batteries, light bulbs, and other expendable items are not covered by this warranty. Repair service, adjustment and calibration due to misuse, abuse or negligence are not covered by this warranty. Unauthorized service or modification of the product or of any furnished components will void this warranty in its entirety. This warranty does not include reimbursement for inconvenience, installation, setup time, loss of use, postage, unauthorized service, or other products used in conjunction with, but are not supplied by, 1800doorbell.

All requests for replacement must include a **dated sales receipt** (copies accepted). 1800Doorbell and LHE ARE NOT LIABLE FOR LOST PROFITS, INDIRECT, SPECIAL, EXEMPLARY, INCIDENTAL OR CONSEQUENTIAL DAMAGES INCLUDING WITHOUT LIMITATION ANY SUCH DAMAGES DUE TO IMPROPER WIRING OR MISUSE OF THE PRODUCT. As some states do not allow the exclusion or limitation of incidental or consequential damages, the above limitation and exclusion may not apply to you.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules: These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



**SAFEGUARD**  
SUPPLY

SafeGuard Supply, LLC.  
2260 Moon Station Ct. NW  
STE 110  
Kennesaw, GA 30144

P: 800-366-7235  
E: [info@1800doorbell.com](mailto:info@1800doorbell.com)  
URL: [www.1800doorbell.com](http://www.1800doorbell.com)