

LRA-DSTX MANUAL

Installing Sensor Batteries


The sensor is designed to run wirelessly from a remote location off of four (4) AA batteries (not included).



1. Remove the sensor's front cover by removing the two cover screws. Install four (4) AA batteries as indicated.




2. Replace the cover and secure the four screws.

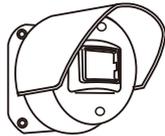


3. Replace the sun blocker on the sensor

Adjusting Sensor Settings

Several switches are contained within the battery compartment which regulate various functions of the unit (i.e. timers, photo sensors, sensitivity). Follow this guide to adjust your unit to the desired setting(s).

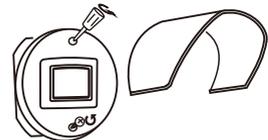

1. Remove the sun shade and the four screws holding the sensor cover in place.

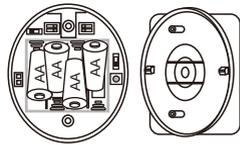

2. Inside the sensor unit is a battery compartment and the rows of switches which control the sensor settings.

3. Use the guide below to set the sensor according to your preferences.

Interval "Sleep" Timer: 7 sec. 30 sec.

Distance Sensitivity: 12m 8m 7m 4m

Filter (Moving Speed): 1-2 m/sec. 0.5-1 m/sec.

Photo Sensor On/Off: ON OFF

Default	
Photo Sensor	<input type="checkbox"/> Off
Interval Timer	<input type="checkbox"/> 7 sec.
Distance	<input type="checkbox"/> 12m
Filter	<input type="checkbox"/> 1-2 m/sec

Battery Compartment, Test Button, Photo Sensor On/Off

Code Matching & Tune Selection


Step 1: Insert the battery into the transmitter to be used (Sensor)

Step 2: Insert the batteries into the receiver (chime unit).

Step 3: Enter pairing mode for the receiver (chime unit). Press & hold the zone selector button for 3 seconds. The LED in zone #1 will flash.


Step 4: Press the zone selector button again to move to the zone you wish to pair with. Press the melody selector button to scroll through the melodies. Once you hear a melody you prefer, do not press any button as the melody is set for that zone.

Step 5: Once the zone & melody are selected, press the test button on the receiver (chime unit) will generate tones. Press the zone selector button to exit the pairing mode, the system is now ready to use.

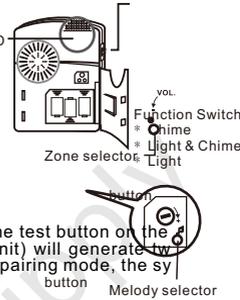


Helpful Tip! Multiple Receiver Conflicts

If you have multiple receivers and they utilize the same signal code, you will need to manually change the code in one or more of your sensors. To do this, remove one of the battery, PRESS and HOLD the "test" button in the sensor battery compartment, insert the battery, HOLD the button for 5 seconds. When the LED flashes five times, a new signal code has been automatically generated. NOTE: you will have to repair a receiver with the newly coded sensor(s).

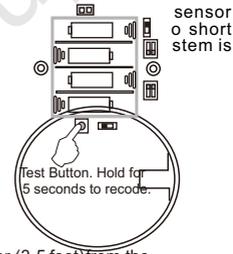


Installing your Sensor


It is recommended that the motion sensor be mounted 1 meter (3-5 feet) from the ground on a sturdy surface (i.e. a wall or stiff post), and that the "eye" be pointed toward the target sensing area and slightly downward.

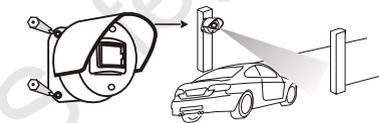

1. Mark the mounting surface with a pencil, using the four mounting holes on the sensor mount as a guide.

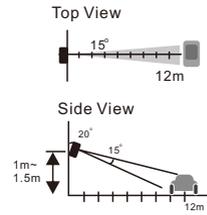

2. Drill the sensor mount to the mounting surface using the provided screws. It is recommended that 25mm deep priming holes first be drilled with 7mm electric drill bit prior to fitting the screw

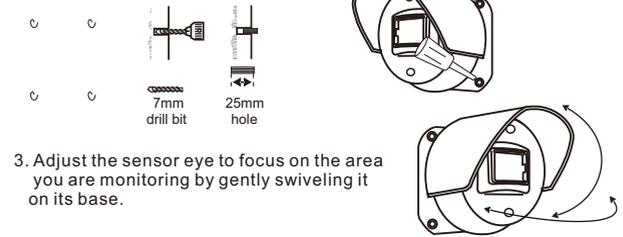

3. Adjust the sensor eye to focus on the area you are monitoring by gently swiveling it on its base.

TECHNICAL SUPPORT

If you need assistance with the operation of this product, please contact us. You can reach us by phone at 904-245-1184 from 8:00AM to 5:00PM Monday through Friday, EST. You may also reach us via email at info@safeguardsupply.com

WARRANTY INFORMATION

The product you have purchased is guaranteed against defects in workmanship and materials for a period of one year from the date of purchase. Warranties implied by law are subject to the same time period limitation. For a detailed warranty policy, please visit our website by visiting: www.safeguardsupply.com/warranty.htm

FCC Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver. Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. **Note: Modifications to this product will void the user's authority to operate this equipment.**

Safeguard Supply, LLC.
9655 Florida Mining Blvd. W.
Ste. 401
Jacksonville, FL 32257 USA

www.safeguardsupply.com
info@safeguardsupply.com

(+1) 904-245-1184



RoHS Made in China - 2016